



USE JP1-JP4 TO SELECT N/O OR N/C FOR RELAY1-4
CONNECT JD1-JD4 FOR PROXIMITY READER.